

Installation TLE P3 from D5T5.com


ATTENTION: before you start, turn off engine, turn off lights and remove key from ignition !

1/ in trunk remove the light from the ceiling with the flat screw driver – see second page

2/ loose the screw with 8mm wrench under the light you removed

3/ gently pull the plastic ceiling panel towards the ground – it holds with the plastic fasteners

4/ localize two connectors on the left side next to the screw you removed, there is one light-grey and dark-grey connector – pull the light-grey connector located on the left next to the dark-grey connector towards to back of the car and remove it from fastener – once it is loose, disconnect the connector apart

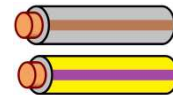

5/ on the light grey connector localize wires: yellow-violet and grey-brown

6/ according the version of TLE, what you have in your hands, continue with connection:

Version A – wires: **black** with eye terminal / **violet** / **grey**

connection: violet cable from TLE to yellow-violet in car / grey cable from TLE to grey-brown in car

Version B – wires: **black** with eye terminal / **yellow** / **brown**

connection: yellow cable from TLE to yellow-violet in car / brown cable from TLE to grey-brown in car

- please use attached 3M scotchlok fasteners (tutorial on the next page) or solder the wires

- **NEVER use loose connection – it could lead to the fire in the connector!**

7/ affix the TLE with attached doublesided tape to the car body

8/ return back the plastic ceiling panel and lead the black cable with eye terminal from TLE and the cable for lamp thru the hole for the ceiling lamp

9/ gently fasten the eye terminal from TLE with the screw you removed before






10/ connect the green lamp connector into the lamp and push the lamp back into the ceiling - gently

If you followed the instructions, your upper part of tail lights should glow as on the picture below this text.

Pictures are on the next page

Thank you for purchasing TLE from D5T5.com!



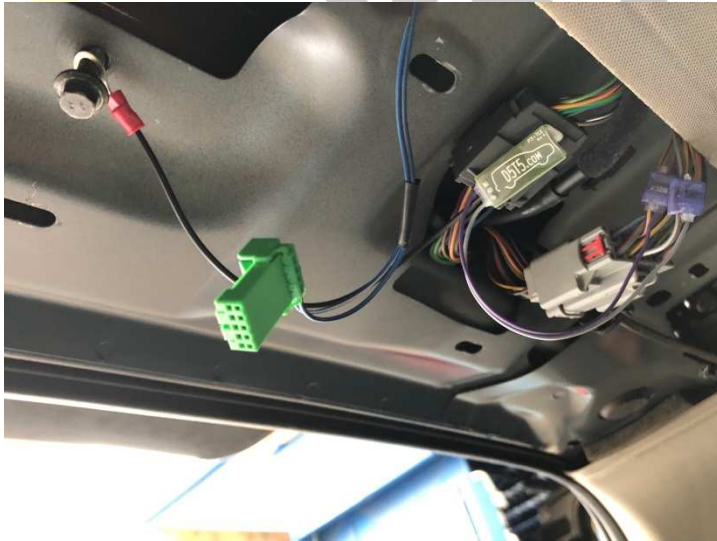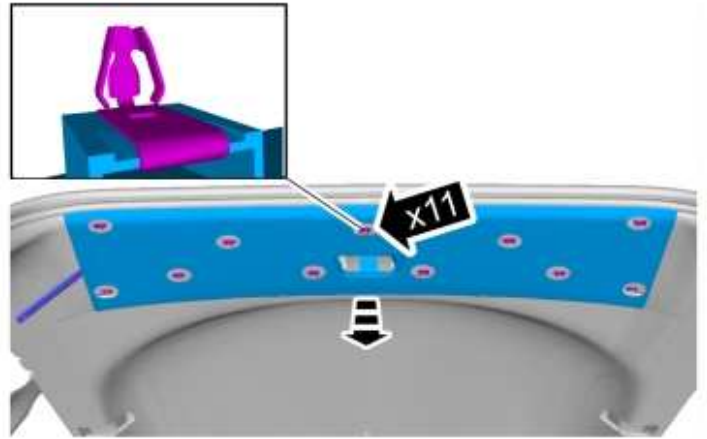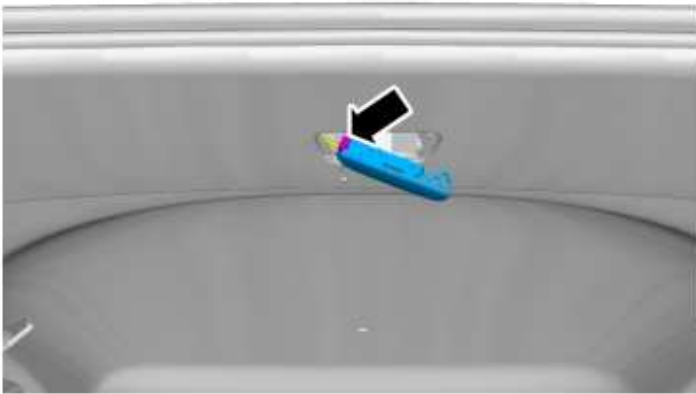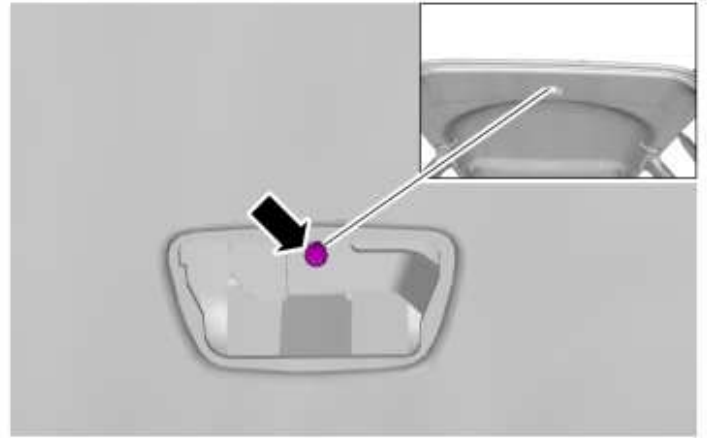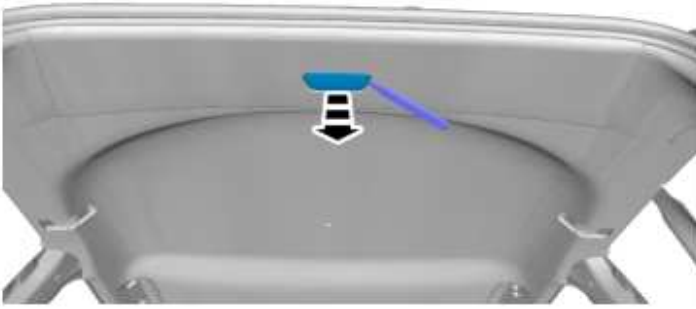

3M Scotchlok UB2 – connection tutorial

Put the wire from TLE into the scotchlok fastener and from the side put the cable from car (it must be completely in the scotchlok fastener – as you see on the picture bellow), gently press the fastener with pliers – do not crush the fastener!

